



USING THE WASHING MACHINE

1. Remove PENS, COINS and CARDS and Put your clothes in the machine and Close the door. (Don't overstuff the machine!)
2. Power ON the machine. 
3. Select the **Intensive 60** mode (Best for quick daily use) on the dial.
4. Pull the tray on the left, and put **1 spoon** (MAX) detergent powder in front load machine. (Excess foam can damage front load machines and will cause long rinsing time to remove the foam)
5. Press **Start**. You should see a Red Door locked symbol. If not press the door  handle, the door may not be shut properly.
6. Approximate time for the wash cycle will be shown, (1 hour for Intensive 60) and the wash cycle will start. ENSURE THAT THE TAP IS ON. You will hear the sound of water pouring in.
7. After the wash cycle is over the machine will sound a musical alarm and then automatically switch off, and unlock the door. **Wait till it switches off completely, and then open the door**, else the door may get stuck in locked mode. (IF STUCK IN LOCKED MODE – RED LOCK INDICATOR IS ON, put the machine in another spin only cycle: Switch on the machine, press Spin to select 400 or 800 rpm and press Start. Wait for it to complete and shut down and hopefully it will be unlocked now. ALTERNATIVELY Switching ON and OFF the machine and leaving it OFF for some time may unlock the door).
8. **KEEP THE DOOR OPEN**, for the machine to dry and deodorize.

