

# USING THE DRYER



1. **OPEN AND CLEAN THE LINT FILTER INSIDE FIRST.** If the filter is clogged, air will not flow, the machine will heat up (motor may burn out) and clothes will not dry. This is the major reason for the breakdown of the dryer!
2. Put the rinsed clothes in (Water should not be dripping from it) and Select **40-60 minutes** (enough for light cotton clothes. May need more time for heavy jeans) on the dial, and close the door.
3. The machine will switch off after the timer runs out. One can switch off the machine at any time if needed, by pulling the door open.

**NOTE:** 1. The dial can be turned only in CLOCKWISE Direction.

2. If the machine overheats an internal switch will trip off. Let it cool, and press the red switch under the door handle to reset.

3. Ensure that the dryer does not get wet, it may short-circuit.

4. Ensure that the top vent of the Dryer is not obstructed, else the machine will overheat and will also not dry clothes due to reduced airflow.