

# USING TOP LG WASHING MACHINE

1. Remove Pens, Coins and cards and put your cloths in the machine. (Don't over stuff machine.) Add Powder in **DETERGENT** Box and close door.

2. **Power ON** the Machine.



3. Use to select the proper amount of water in relation to the weight and type of laundry.

**Automatically** controlled , but can be selected **manually** by pressing **WATER** button.



**OR**

4. Select Program as per cloth requirement.



5. Press Start Button:

